


Applying a screen protector perfectly is a difficult thing to do that requires technique. Prevent air bubbles and imperfect edges with this quick guide. Both plastic or tempered glass protectors can be applied by following this guide.

What you'll need

- A hard flat surface
- Microfiber cloth
- Clear tape
- A room with minimal dust and wind
- Clean hands

Step 1: Wipe

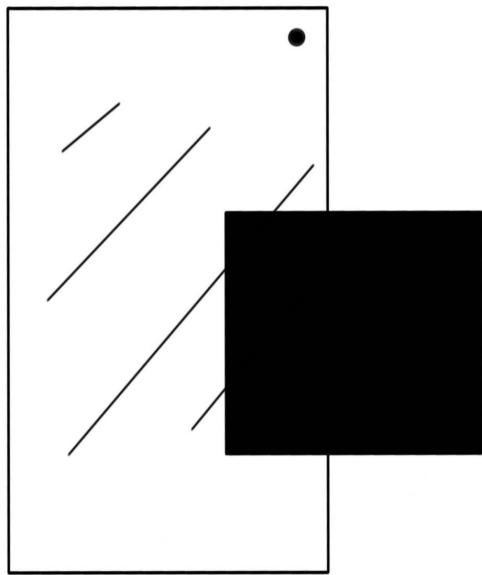


Remove the old protector and phone case if you haven't already, and wipe the screen with the microfiber cloth until it's spotless.

- i** If smudges persist, wet the cloth with a few drops of water and rub.

Step 2: Tape

⚠ Make sure to check the instructions included with your screen protector to identify the front and back.

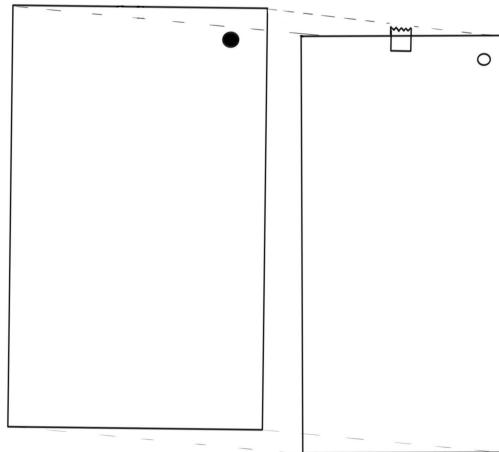


Align the back of the protector to the phone by matching the cut-outs with your phone's front camera.

When the protector is aligned, tape it to your phone on the top.


- i** Taping the protector on the long side of the phone is also an option.

Step 3: Peel

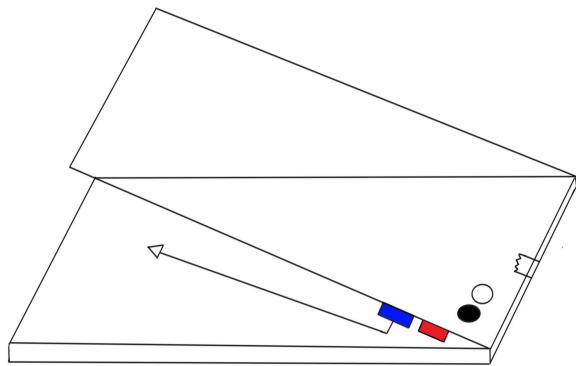

Peel the back layer of the protector **facing the screen** using the tab.


⚠ Do not firmly press the protector down on the screen in this step. Bubbles will be smoothed out later.

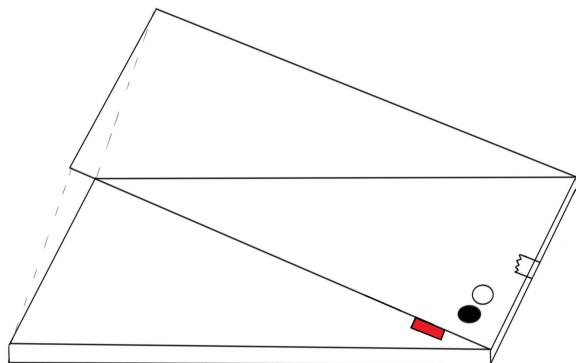


Guide the protector and slowly set it down onto the screen, following the camera cut-out(s).

ℹ If some dust got under the protector while applying, use a ring of tape around your finger and gently lift up the part of the protector to dab the spots with dust.

Step 4: Set

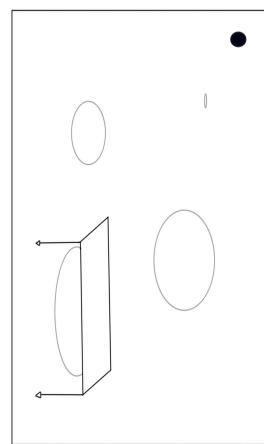

Working from the inside outward, use a plastic card to push the air bubbles out of the protector.

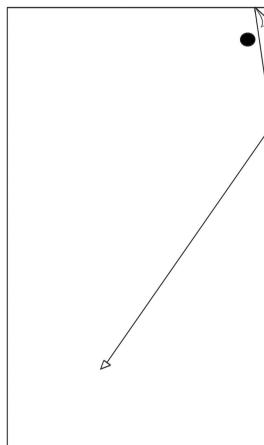

Gently peel the front layer of the protector to finish application.

ℹ If you see tiny bubbles still left in the protector, they usually disappear within a few days.